

Letter Opener Instructions:

## Letter Opener #10 Kit Instructions

### You will need:

Drill bits: 7.5mm

Letter Opener #10 Bushing

**Drill, Tube & Square your blanks & mount on your mandrel**



**Turn your blank down to the bushings. Polish & finish blank**

**Lay out your parts based on the diagram below**



### Assembly

1. Press the end cap into tube.
2. Press the center band into opposite end.
3. Put the retainer into the brass tube, making sure the chamfered end is against the tube.
4. Pass the tang of the blade through the coupler and screw into the thread retainer handle.
5. Optional- you can use a drop of CA glue on all mating parts to ensure a permanent joint.

## Letter Opener #11 Kit Instructions

### You will need:

Drill bits: 7mm


Letter Opener #11 Bushing

**Drill, Tube & Square your blanks & mount on your mandrel**



**Turn your blank down to the bushings. Polish & finish blank**

**Lay out your parts based on the diagram below**

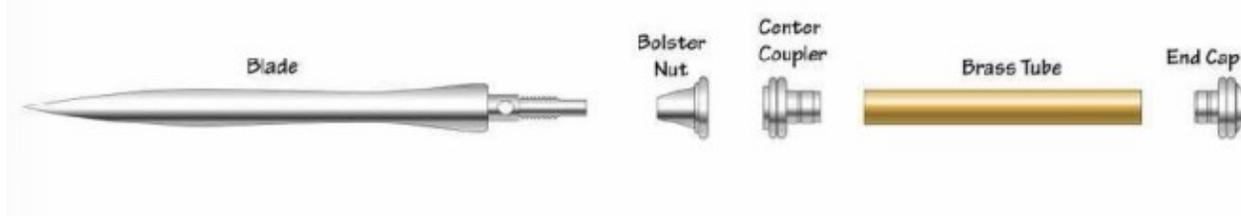

### Assembly

1. Press the center coupler, stepped end first, into one end of the tube.
2. Press the cap into the other end of the tube.
3. Slide the bolster nut onto the blade, cone end first, and thread the blade/bolster nut into the center coupler.