
Magic Wand Kit Instructions

You will need:
Drill bits: 3/8”mm
Magic Wand Bushing

Drill, Tube & Square your blanks & mount on your mandrel

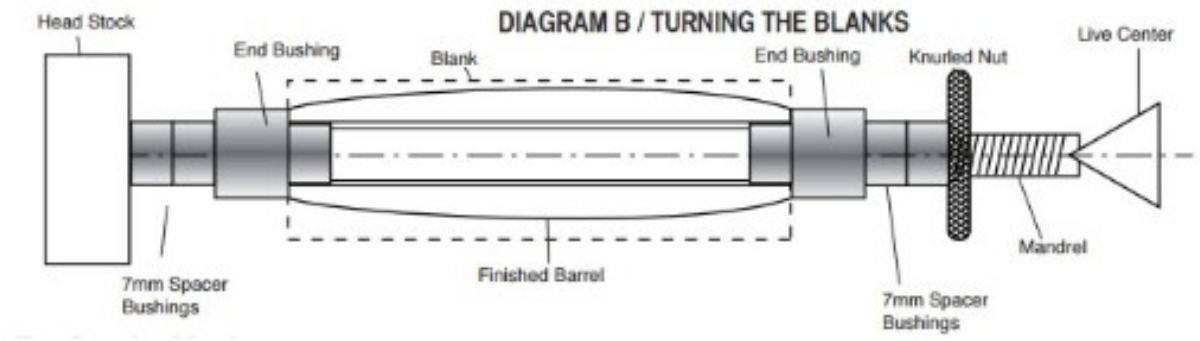

Turn your blank down to the bushings. Polish & finish blank

Lay out your parts based on the diagram below



Assembling the kit
1. Press the End Cap into one end of the tube.
2. Press Coupler into the opposite end of the tube.
3. Place “O” ring on the threaded adapter between the two different threads
4. Screw smaller threaded end into the coupler
5. Screw wand tip onto the opposite end of the threaded adapter
6. Practice your spells and magic with caution