


Perfume Atomizer Kit Instructions

You will need:

Drill bits: 19/32", 15mm
Perfume Atomizer Bushing

Drill, Tube & Square your blanks & mount on your mandrel

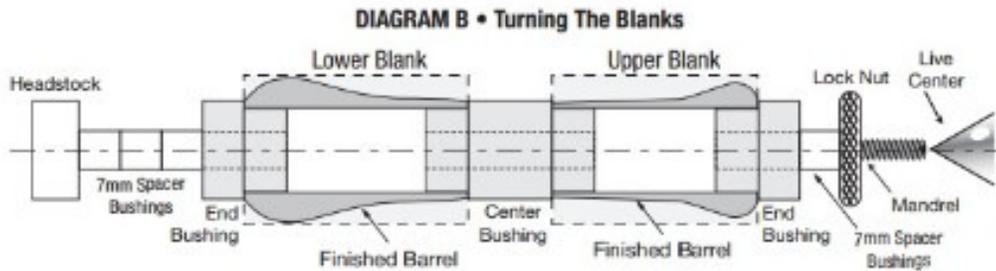

Turn your blank down to the bushings. Polish & finish blank
Lay out your parts based on the diagram below



Assembling the pen

1. Press end cap into the top o the short blank and the bottom of the long blank.
2. Press the short end of the coupling into the open end of the long blank.
3. Insert the retainer spring, flat end first, into the long blank past the coupling through to the bottom.
4. Fill the atomizer with your perfume or other liquid using the plastic filler.
5. Insert the atomizer into the long blank where the retainer will secure it.
6. Tear off 2 velvet sticker and glue them into opening end of upper tube. When you cover the upper tube the velvet sticker is to protect the surface of the coupler.
7. Push the 2 halves together.