

Shaving Kits:

Mach 3 Razor:

## Mach 3 Razor Kit Instructions

### You will need:

Drill bits: 7mm

Razor Bushing

**Drill, Tube & Square your blanks & mount on your mandrel**



**Turn your blank down to the bushings. Polish & finish blank**

**Lay out your parts based on the diagram below**



### Assembling the pen

1. Press the coupler into either end of the tube.
2. Press the lower cap into the opposite end.
3. Screw the razor holder into the coupler.

Fusion Razor:

## Fusion Razor Kit Instructions

### You will need:


Drill bits: 7mm

Razor Bushing

**Drill, Tube & Square your blanks & mount on your mandrel**



**Turn your blank down to the bushings. Polish & finish blank**  
**Lay out your parts based on the diagram below**

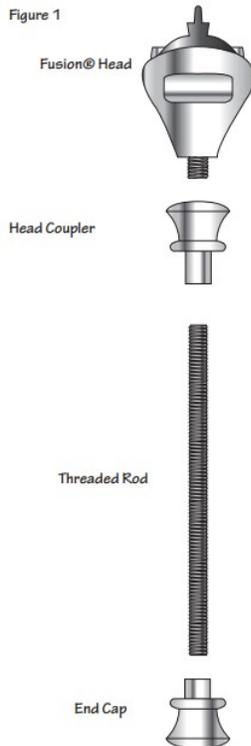

**Assembling the pen**

1. Thread the rod into the end cap.
2. Slide your blank over the threaded rod and thread the head coupler assembly onto the threaded rod.
3. Thread the Fusion head onto the head coupler until snug

## Shaving Stand: **Shaving Stand Kit Instructions**

### **You will need:**

Drill bits: 8.5mm


Shaving Stand Bushing

### **Drill, Tube & Square your blanks & mount on your mandrel**



Turn your blank down to the bushings. Polish & finish blank

Lay out your parts based on the diagram below

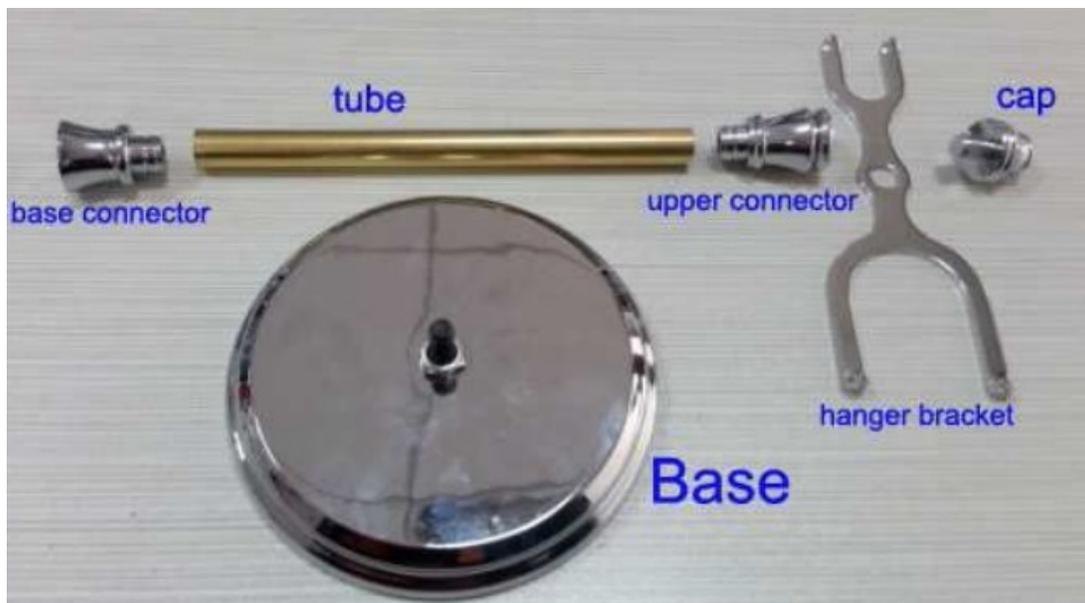

### **Assembly**

1. Press the base connector into either end of the tube.
2. Press the upper connector into the opposite end of the tube.
3. Screw the base connector to the base, then connect other parts of the stand.



Shaving Brush:

## Shaving Brush Kit Instructions

### You will need:

Drill bits: 7mm & 7/8" Forstner bit

Shaving Brush Bushing

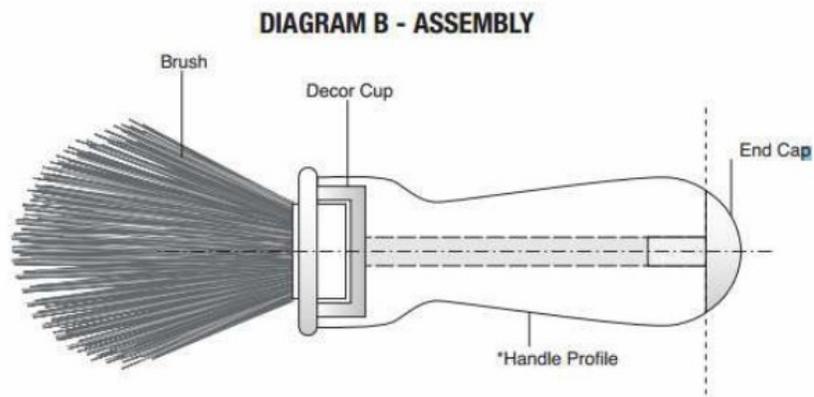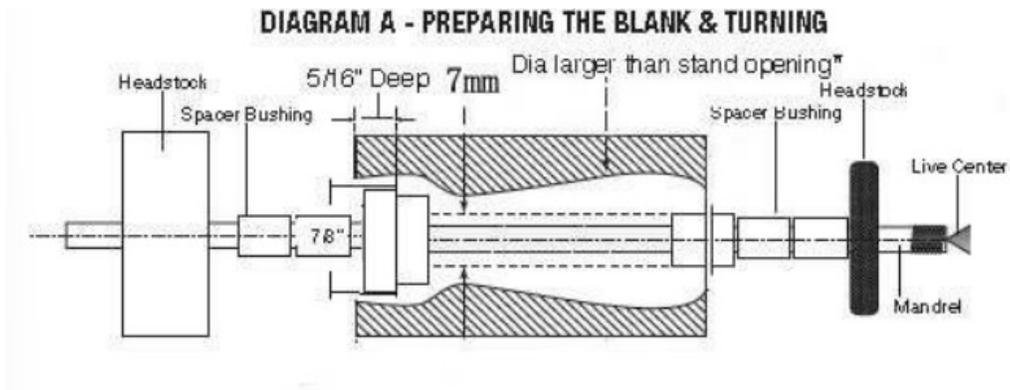

### Turning & Assembly

1. Recommended blank size 2.5" x 1.5"
2. Drill a hole 5/16" deep in one end with a 7/8" forstner bit.
3. Use the center mark of the forstner bit to center and drill a 7mm hole through the blank.
4. Mount the bushing and blank over the mandrel.
5. Turn the blank to desired profile. Important - Turn the profile of the blank to fit your stand opening.
6. Glue the brush base into the décor cup.
7. Glue the assembly into the recess in the handle.
8. Glue the end cap into the opposite end of the handle.